



Armadillo A

ANNEX

USER MANUAL



Congratulations on the purchase of the 23ZERO Armadillo A Annex. The Annex attaches directly to an Armadillo A rooftop tent. The annexes are available in 2 sizes, A2 & A3 each made to fit corresponding 23ZERO Armadillo A tents.

PLEASE FOLLOW THESE INSTRUCTIONS FOR CORRECT INSTALLATION

PACKAGE CONTENTS

- 1x Polyester Change room annex
- 1 x PVC annex floor (not attached to annex)
- 2 x telescopic poles with carry bag
- pegs, guy ropes & peg bag
- Pack up strap



- Set up Armadillo A rooftop tent. Ensure nobody is inside tent, retract ladder and retain with ladder strap - Fig.1
- Identify Kedar ropes & attaching zips on Annex and layout under Armadillo tent - Fig.2

NOTE: On first use PVC floor is not attached to annex.

Fig.1



Fig.2



- Locate Kedar rope on 2 sides of opening - Fig.3
- Locate rope tracks on underside of Armadillo A tent - Fig.4

Fig.3



Fig.4



- Begin sliding Kedar rope into Armadillo A rope track - Fig.5
- Only slide in about 6 inches at first - Fig.6
- Slide Kedar rope on opposite side of annex into other rope track on other side of tent baseboard - Fig.7
- Continue this alternating from one side to the other until all Kedar rope is attached - Fig.8

Fig.5



Fig.6



Fig.7

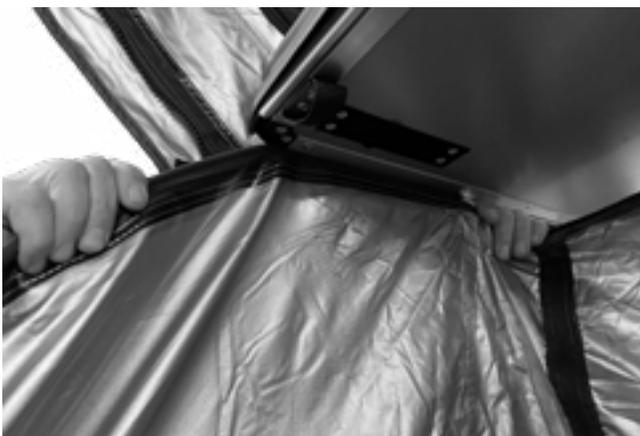


Fig.8





IMPORTANT::
Depending on vehicle height, roof top tent ladder may be required to complete the following step. Set up ladder as per roof top tent instructions before climbing.

- Locate zip slide on annex and attach to zip on Armadillo A tent canopy - Fig.9
- Lift annex to relieve weight from zip and continue zipping with opposite hand - Fig.10

Fig.9



Fig.10



- Once zipped, annex will look like this - Fig.11
- Attach PVC floor via zip if desired and anchor annex corners with pegs supplied - Fig.12

NOTE: Retract ladder and secure with retaining strap to avoid ladder interference while attaching floor.

Fig.11



Fig.12



- Extend telescopic poles to approx baseboard height and twist to lock
- Locate eyelets on annex roof beside each side of entry door and insert pole spigot - Fig.13
- Repeat on other side. Adjust telescopic poles to taut annex - Fig.14

Fig.13



Fig.14



- Attach guy ropes to external rings beside each pole spigot and anchor adequately with pegs supplied - Fig.15
- Complete setup by attaching touch tape tabs from canopy to annex both sides - Fig.16

Fig.15



Fig.16



Set up Complete



Pack up / Folding



Warranty

23ZERO will replace or repair any product at its discretion that is subject to faulty manufacturing or workmanship including materials.

Making a claim

To make a claim in relation to the above manufacturers warranty please ensure you retain your sales receipt of purchase. Please contact us stating the nature of your claim and we will be in touch with you shortly. If you require additional assistance, please call 801-349-1099 to discuss and arrange your claim. Product subject to warranty will be sent to 23ZERO USA, 2195 S Presidents Dr. Ste B. West Valley City, UT 84120. All freight costs associated with return of product for assessment is payable by the customer.

Due to our policy of continual product development, the specifications, colors and feature may vary.

Please visit <https://23zero.com/returns/> to see full details.